



Handrails

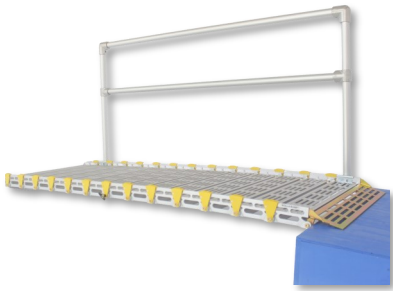

Straight End Handrails:
More Economical and Provides Additional Security to Any Ramp.

Features & Benefits

- Adds a layer of security—for one side or both sides
- Inserted and removed quickly—keeps your ramp portable
- Available for any ramp length
- May be purchased with ramp or added any time

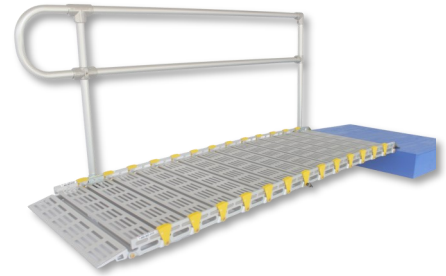

Loop-End Handrails:
Provides Full End-to-End Coverage for Added Security. (12" loops). Available For One or Both Ends.

Choose Sectioned or Continuous Handrails:

Sections: Standard on all ramps over 10' (4" gaps between sections)

- Multiple shorter handrail sections along the ramp, provides easier portability, setup, and removal of the system.
- Handrail sections can be quickly removed, without disassembly!



Continuous Handrails:

- Continuous handrails span the full length of ramp from top to bottom with no gaps!
- Best for stationary or semi-permanent ADA installations.



ASSEMBLY REQUIRED

- Lay the handrail parts on a flat surface and assemble per handrail instructions.
- Loosely attach the brackets to the ramp. These are easily installed using one bolt and one nut.
- Insert assembled handrails into brackets on ramp.
- Tighten all set screws on rails and brackets using tools provided.



Loop End Assembly



Hook Bracket Attached to Ramp



Handrail Inserted into Bracket