PINNACLE SL600 HARMAR'S MOST COMPACT STAIR LIFT





A STEP ABOVE

The Pinnacle SL600 has earned its name and reputation for standing above the rest. Design, form, and function come together to make Pinnacle reliable, durable, and the most sought after stair lift available.

What makes Pinnacle different? It's what you don't see, the patented helical worm gear and reinforced nylon polymer gear rack. This drive system eliminates maintenance, and provides you with savings on lower energy bills and delivers a smooth ride.

- Just 10 $\frac{1}{2}$ " wide when folded
- Ergonomic control switch
- No lubrication required
- Retractable seat belt








CLEAR WALKWAYS

Harmar's exclusive automatic and mechanical folding rail (optional) removes obstructions and trip hazards at the lower landing area. Its operation is automatic, the user does not need to stop or have someone else assist. And since it's mechanical, there are no additional switches or controls.

PREMIUM PERFORMANCE YOU DESERVE

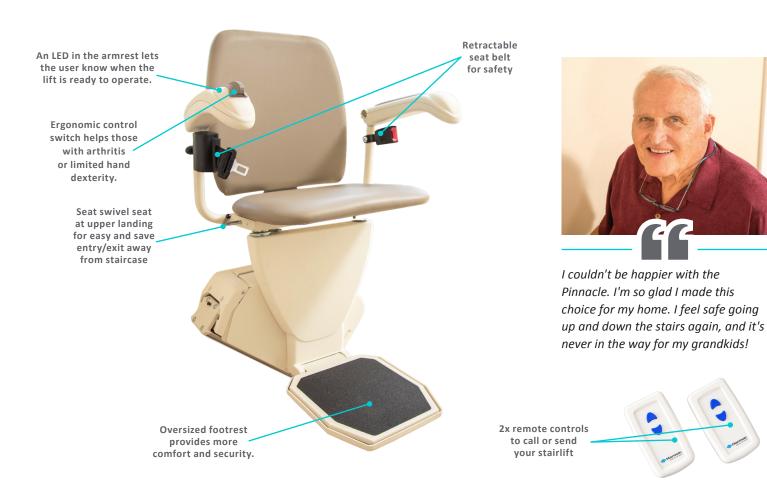

SL600 PRODUCT SPECIFICATIONS

WEIGHT CAPACITY	350 lb	TRACK LENGTH	15' 6" to 70'
SPEED	20 FPM	SEAT SIZE	19" x 16"
INCLINE LIMITS	27° to 52°* * inclines above 45° may require local jurisdiction approval.	FOOTREST SIZE	12.3"x 13.2" 17" - 22" height adjustable
FOLDED WIDTH	 10 ½" from wall 13.6" with folding rail	DRIVE	Patented nylon polymer gear rackHelical worm gear
WARRANTY	Limited lifetime1-year battery	OPTIONS	 Automatic folding rail Key lock Extra rail Manual lowering tool
CERTIFIED	 ETL listed CSA B44.1/ASME A17.5 Safety standard ASME A18.1 Rated commercial and residential 	SAFETY FEATURES	 Retractable seat belt Overspeed brake LED alert system in armrest Swivel seat with interlock Chassis obstruction sensor Footrest obstruction sensor Padded armrest



28NOV2022 | MKT-000023 D

